



AmericanBright™  
Bright ideas. Brilliant solutions.

## 120 Volt Hard-Wired SimpleTube Unit Under Cabinet Installation Instructions

**Warning:** To avoid electrical shock, disconnect power to the unit prior to installation.  
A licensed electrician is recommended for this installation.

**Tools and supplies:** Voltmeter, Screwdriver, Wire nuts, Screws

Parts used in this installation –

SimpleTube x 1, American Bright Optoelectronics Corp., SimpleTube LED Lamp

AB-WALLPLATE x 2, Blank Wallplate White (color may vary)


Buchanan 73201 x 2, Wire Connectors, UL Listed 774A (not included, example only)

### Installation Steps:


1. Locate a switched AC Outlet and turn off the power from the AC Power Panel.




2. Remove AC outlet socket carefully and ground the grounding wire to the junction box.

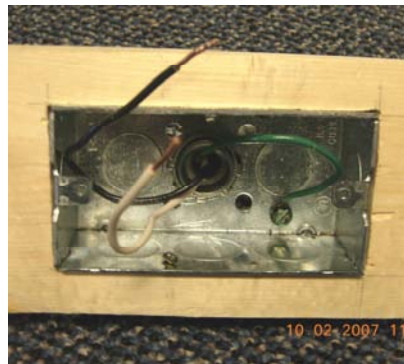


3. Feed black & white wires through AB-WALLPLATE and connect color alike to power wires using Buchanan 73201 wire nuts.

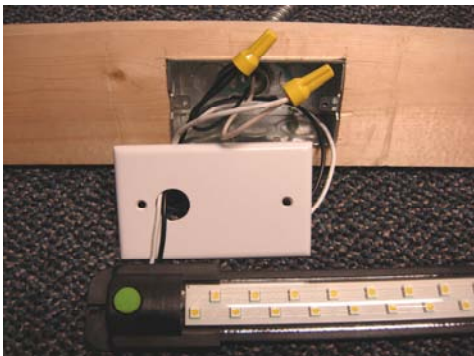

4. Tuck wires nicely into the housing and install AB-WALLPLATE using screws x2.

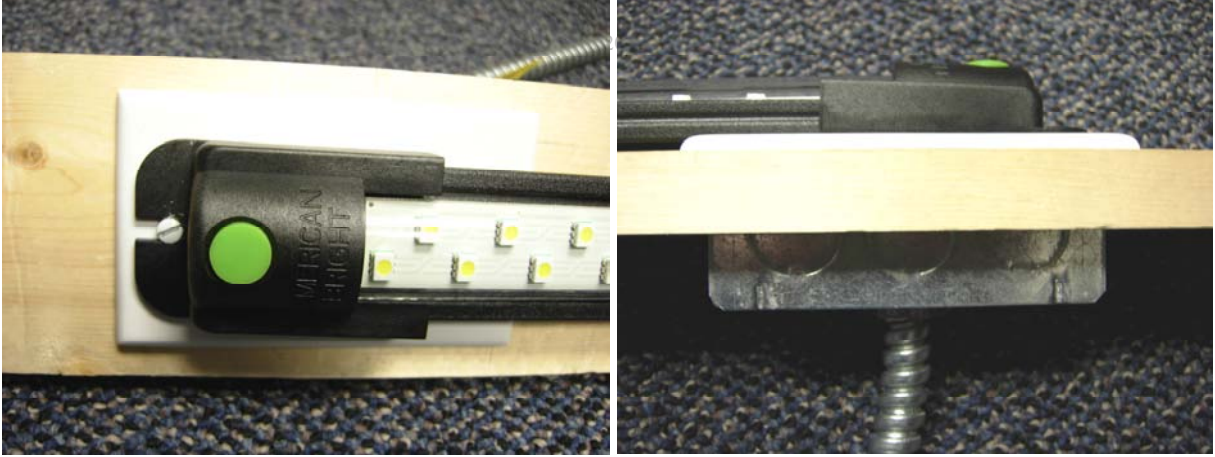

5. Install second AB-WALLPLATE using screws x 2.

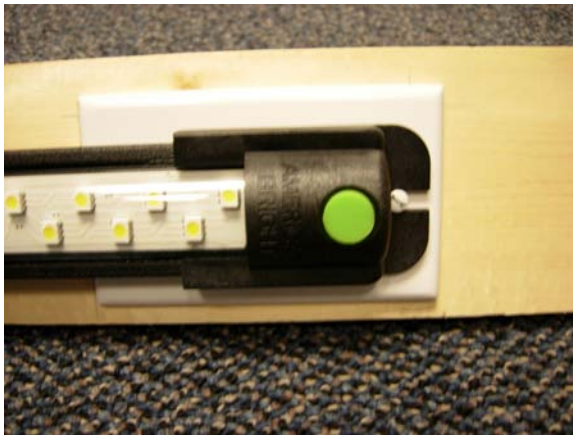

6. Make one last check then test the new lamp

